
STEP 3

Return Collection Pack

- 1. Confirm that the tube has a completed label attached with date of birth and the date of collection. Place the frozen freezer brick and the biohazard bag with frozen tube inside the foam insulator. Replace the foam lid.
- 2. Visit **gdx.net/activate** to enter the date of your final collection and receive your confirmation code. Write the date of collection and your confirmation code on the activation label card.
- 3. Close the cardboard box and place inside the FedEx shipping bag. Follow the shipping instructions provided.

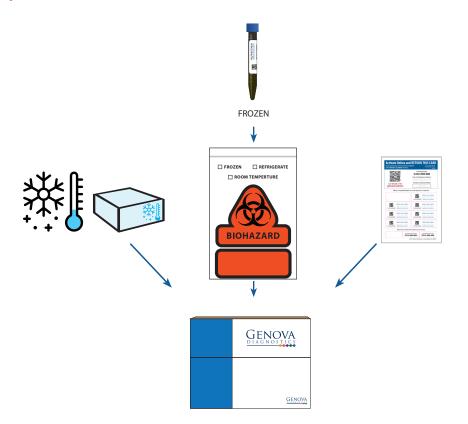



Visit **gdx.net/activate** and enter your requisition number.

Patient Guide



Organic Acids

#3340

STEP 1

Plan Your Collection

Use a calendar to plan your specimen collection. Ship Monday thru Friday and avoid US holidays which may cause delays.

4 Days before Collection

Check with your clinician whether it is necessary to discontinue medications/ supplements.

Some clinicians choose to discontinue non-essential nutritional supplements to get a 'baseline' reading.

Some clinicians choose to continue nutritional supplementation to assess the efficacy of their treatments.

24-Hours Before Collection

Freeze freezer brick at least 8 hours.

Eat usual diet but avoid over-eating any single food or consuming an extreme diet.

Consume no more than six 8-ounce glasses of fluid over the 24 hours before collection

Night Before Collection

Fast overnight. Water is okay.



Valproic acid, acetaminophen and berberine HCl are direct assay interferants for certain analytes.

Abnormal kidney function or use

of diuretics may influence test

Do not collect if there is blood

in urine, including menstrual or

other blood.

BEFORE YOU BEGIN

Activate This Test

Visit gdx.net/activate and enter the number found on the included activation label card.



STEP 2

Specimen Collection

- Review instructions and test prep information at gdx.net/activate.
- 2. Write your **date of birth** (DOB) and the **date of collection** on the labels provided. Attach a completed label to the blue-top amber tube.



Collect Urine

- If you wake up during the night, within 6 hours of your morning urination, collect that urine into the cup and refrigerate it. Upon waking in the morning, collect your urine into the same cup.
- 2. Use the **pipette to transfer urine** from the cup into the bue-top amber tube until nearly full.
- 3. Recap the tube tightly and **shake**.
- 4. Place the **tube into the biohazard bag and freeze** for a minimum of **2 hours**.



